


## 弧锥直角 SPIRAL BEVEL RIGHT ANGLE

■ 120W □ 90mm

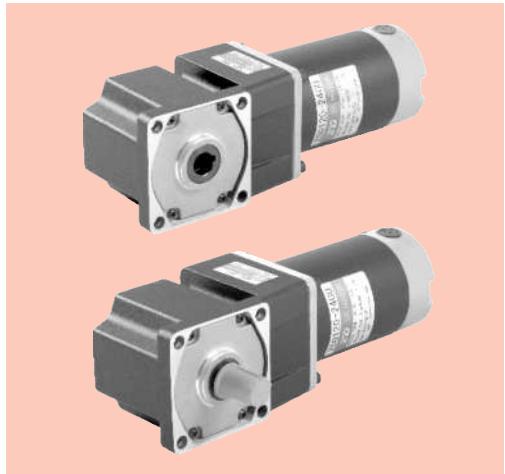

### 装有减速器时的容许转矩 Gear Motor-Torque Table

- 减速机·中间减速机另售。Gearhead and Intermediate gearhead are sold separately.
- 减速机品名的□中为减速比的数值。Enter the reduction ratio into the blank(□) within the model name.
- 色表示分别从电动机轴轴端和减速器轴轴端看时，电机轴与输出轴转向反方向运转。  
其他则为同一方向运转。
- Indicates the opposite rotating direction between motor shaft and gearbox shaft while others are in same direction.
- 转速是以电动机的额定转速为基准除以减速比而算出来的数值。实际转速将随负载大小变化而比所示数值减少2%~20%左右。  
The speed is calculated by dividing the motor's synchronous speed by the reduction ratio. The actual speed is 2%~20% less than the displayed value, depending on the size of the load.
- 希望以大于下表的减速比进行进一步减速时，可在电动机与减速机之间安装减速比为10的中间减速机。这时的容许转矩为20N·m。
- To reduce the speed beyond the reduction ratio in the following table, attach an intermediate gearhead (reduction ratio: 10) between the reducer and motor. In that case, the permissible torque is 20N·m.

### 容许力矩单位 Allowance Torque Unit: 上段 Upside (N.m) / 下段 Belowside (kgf.cm)

| 机型Type<br>电动机/减速机<br>Motor/Gearhead | 减速比Gear Ratio<br>转速Speed<br>r/min | 7.5  | 9    | 12.5 | 15   | 18   | 25   | 30   | 36   | 50   | 60   | 75   | 90   | 100  | 120  | 150  | 180  |
|-------------------------------------|-----------------------------------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|
|                                     |                                   | 346  | 288  | 208  | 173  | 144  | 104  | 86   | 72   | 52   | 43   | 34   | 28   | 26   | 21   | 17   | 14   |
| Z5D120-24GU-26S                     | 5GU□RC/<br>5GU□RT                 | 2.41 | 5.44 | 4.02 | 4.82 | 5.78 | 8.03 | 9.64 | 10.4 | 14.5 | 17.4 | 20.0 | 20.0 | 20.0 | 20.0 | 20.0 | 20.0 |
|                                     |                                   | 24.6 | 55.5 | 41.0 | 48.2 | 59.0 | 81.9 | 98.3 | 106  | 148  | 177  | 200  | 200  | 200  | 200  | 200  | 200  |

### 外形图 (单位:mm) Dimensions (Unit:mm)

